

MSR Module Assembly SOP


UPOS-211Dx-xxxxx, please install the MSR refer to the following steps.

1. 拿出机器，把 UPOS-211 倒扣在桌面上

Take out UPOS-211 from the box, and put it onto the work table



2. 拆下硬盘上方的塑料盖子 Remove the plastic cover

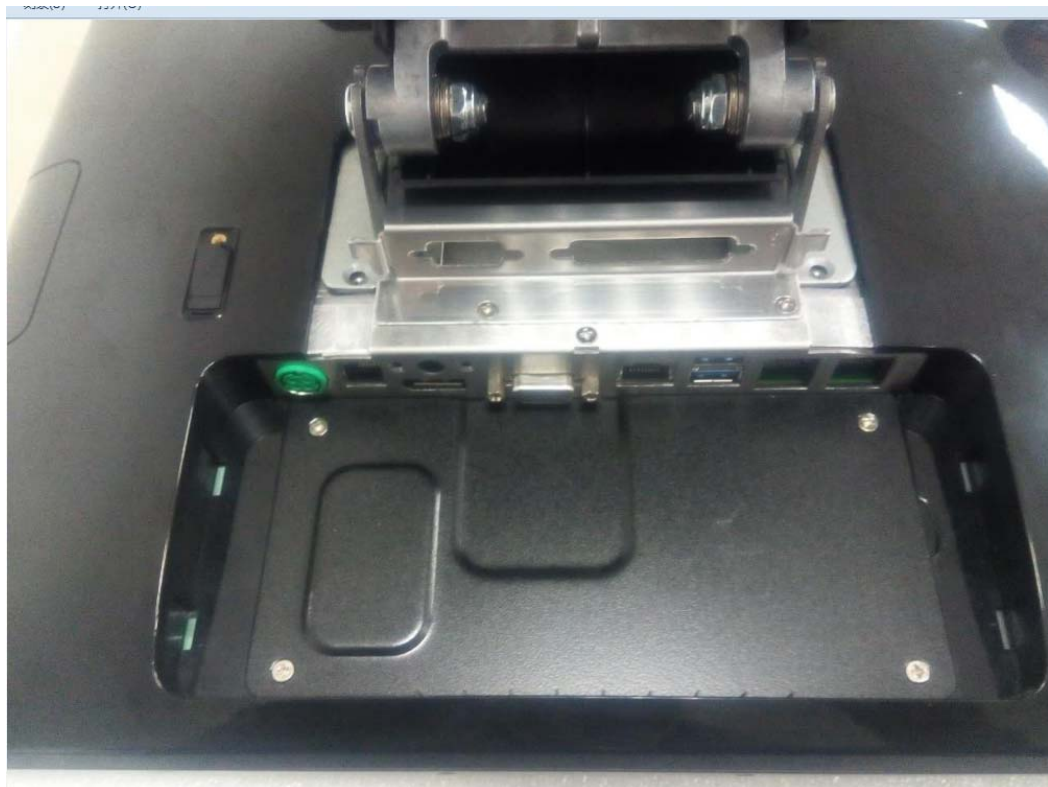

3. 拆下后盖上面的 3 个小塑料盖子 Disassembly 3 covers




备注：检查孔位上有没有螺丝，如果有请取下！

Note: If there are screws, take them off.

4. 用双手向箭头方向压，拆下塑料盖子


Take off the hinge cover, use hands to push as the yellow arrow direction

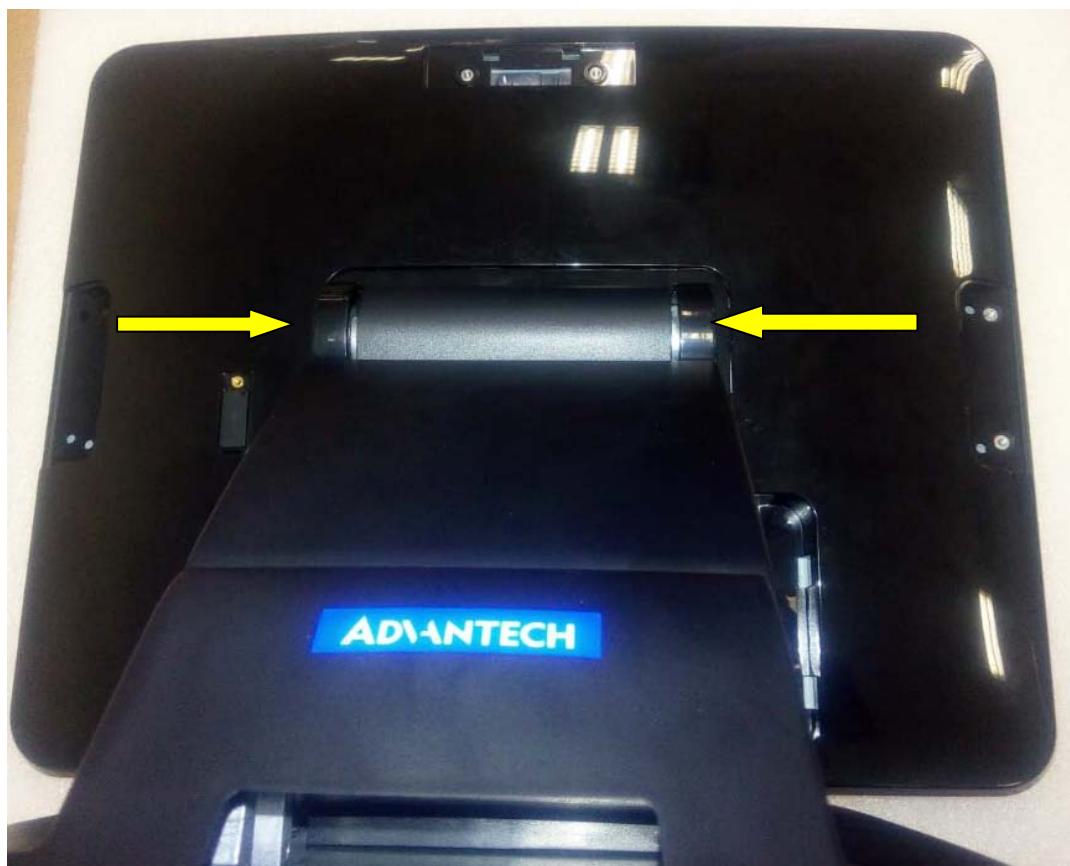

5. 拆下支架螺丝 Take off the screws





6. 拆下螺丝 Take off the screws

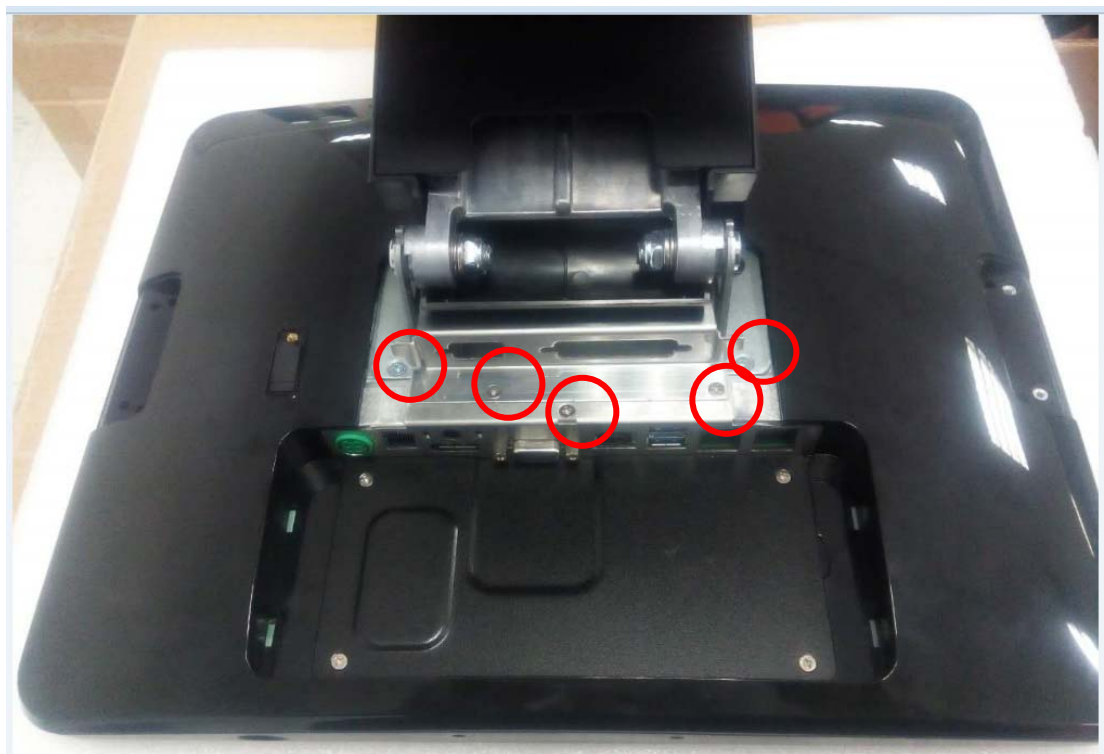

7. 拆下螺丝 Take off the screws





8. 取下底座和后盖 Take off the stand and back cover

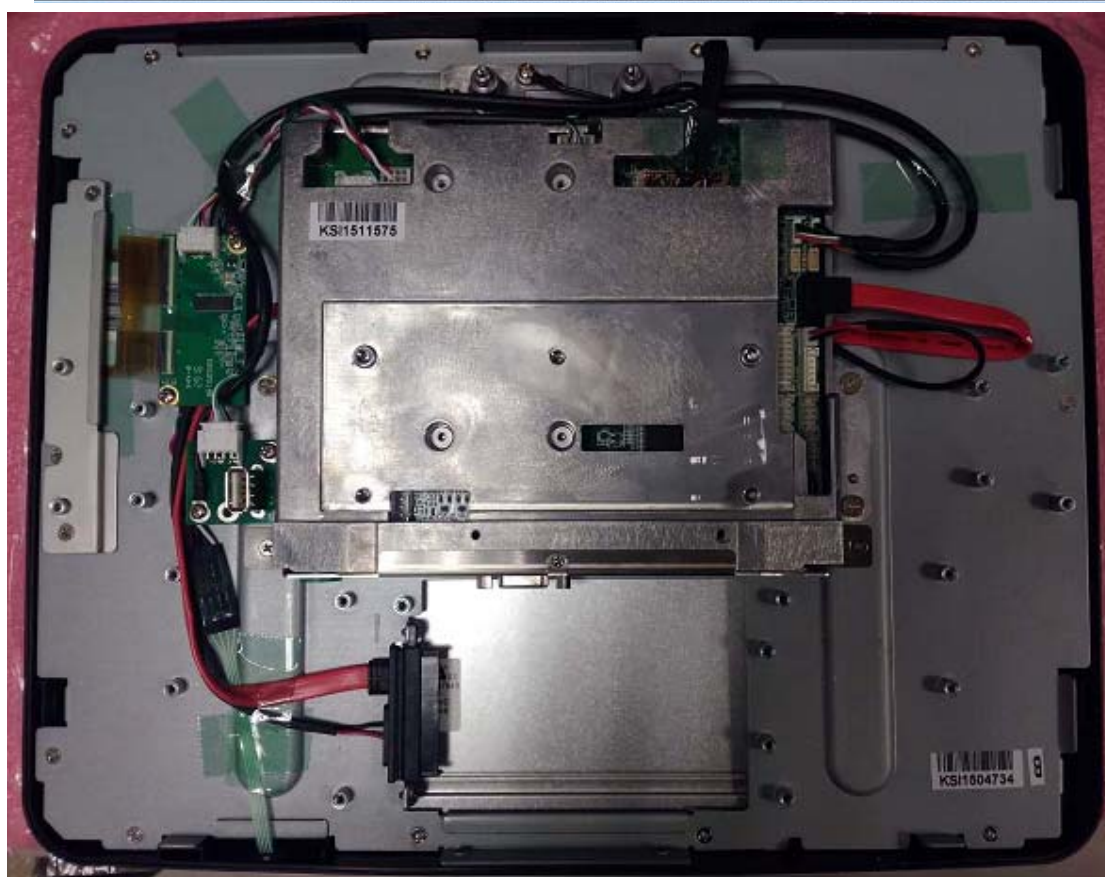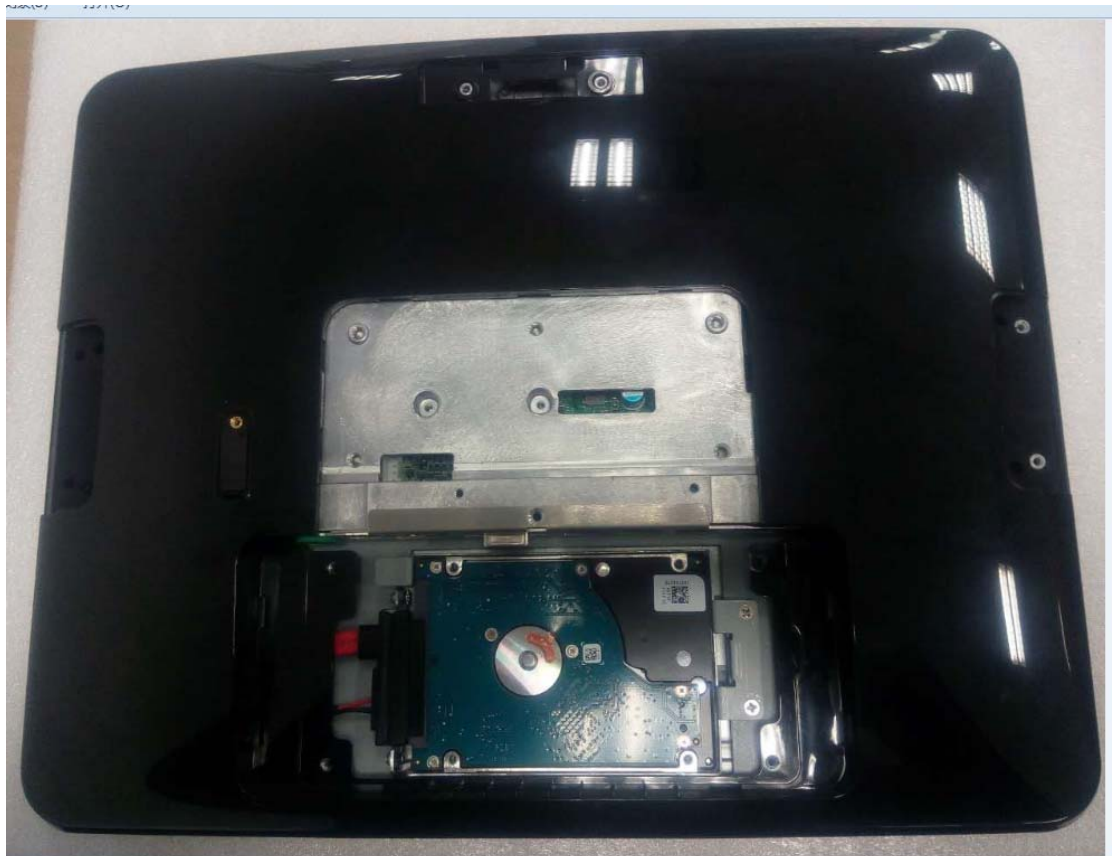


9. 取出 MSR 盒中的附件: 小板和线材,如下连接


Take the convert board & cable from MSR package, and connect it refer to the snapshot

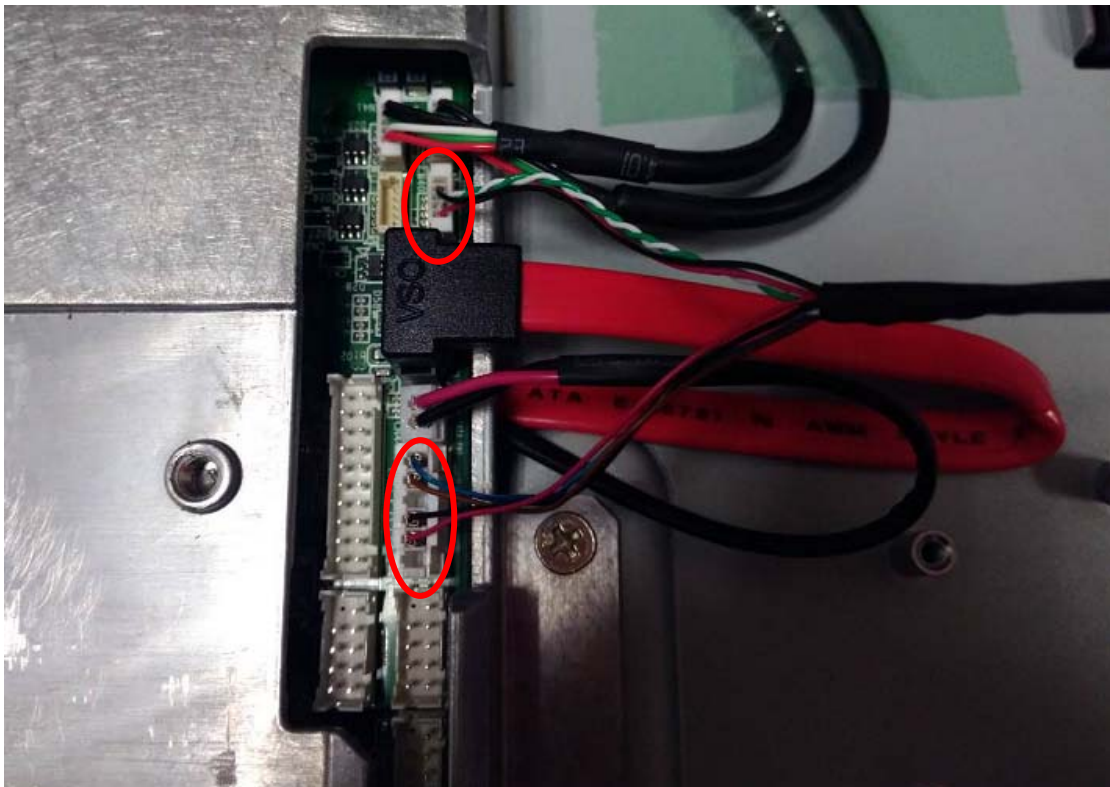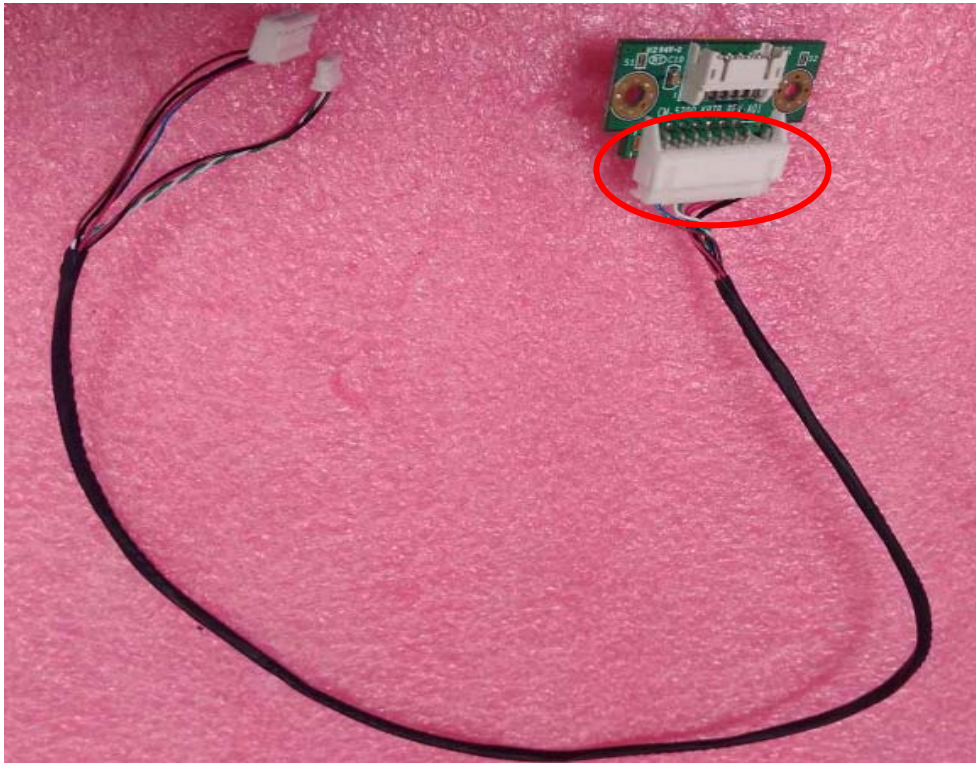

10. 用 2 颗螺丝,锁在以下位置 Install it to the following location by 2 screws

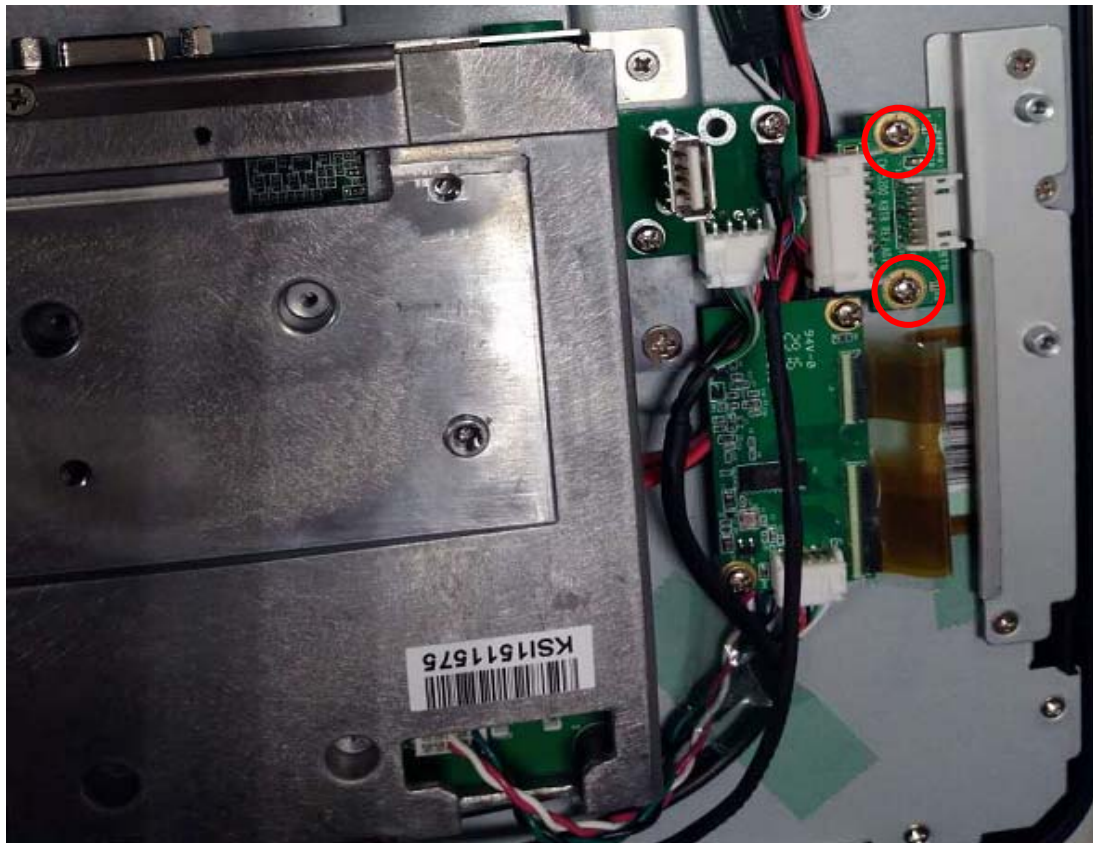

11.连接模块的 MSR cable 线从上部走 Assembly the board to here, and put the cable in order, like the below picture.

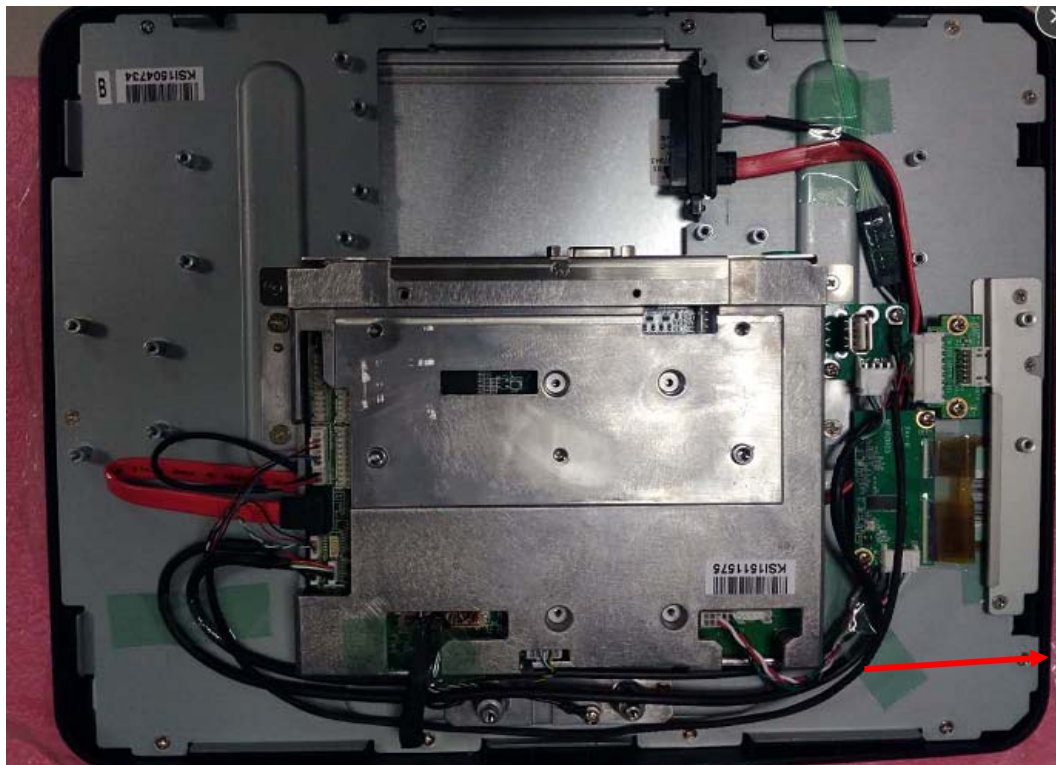

MSR Cable

12 再合上后盖, Assembly the back cover

13 MSR 模组上的线材插入以下位置(MSR module cable insert to the connector (red block)



14 用 2 颗螺丝,锁在以下位置 (Install it to the following location by 2 screws)



15 装上底座,完成安装,assembly all the remaining parts

UPOS-211Fx-xxxxx, please install the MSR refer to the following steps.

1. Disassembly the cover in red block.



2. Connect the MSR cable.



3. Install it to the following location by 2 screws

