Подключение по VNC к ПОС-терминалу АТОЛ Strike

* - данный функционал не доступен на образах для бета-теста. Данный функционал доступен в образах начиная с версии 1.01

1. Запустите на АТОЛ Strike эмулятор терминала команд



2. В эмуляторе терминала наберите команду x11vnc – запустится сервер vnc



- 3. На компьютер, с которого планируется удаленное подключение установите и запустите клиент VNC. Например, **VNC Viewer**
- 4. В окне клиента VNC введите IP адрес терминала Атол Strike, к которому планируется подключение и номер дисплея. Например, **192.168.0.2:0**

V2 VNC Viewer		×
VNC® Viewer		VS
VNC Server:	10.99.150.177:0	~
Encryption:	Prefer off	~
About	Options	Connect

5. После этого нажмите Connect и согласитесь с предупреждением в появившемся окне

VNC Viewer - Encryption			
Unencrypted Connection			
Connecting to: 10.99.150.179:0			
This connection will not be encrypted. Your authentication credentials will be transmitted securely, but all subsequent data exchanged while the connection is in progress may be susceptible to interception by third parties.			
If VNC Server is licensed to use this premium feature, consider enabling it. If not, please upgrade your VNC Server license.			
Do not warn me about this for 10.99.150.179:0 again			
Continue Cancel			

6. Откроется окно удаленного доступа к ПОС-терминалу АТОЛ Strike